

# Pop Up Tent



## Important

The Pop Up Tent should not be used in windy weather to avoid tipping risk.

The legs of the frame are easily broken due to tip over.

Please ensure that the Tent is secured properly to the ground with tent pegs, sand bags or other weights when use outdoor.

The Pop Up Tent are designed as a temporary shelter. They should not be left up for extended periods of time and should never be left unattended.

## Cleaning

We recommend that the canopy and walls are cleaned after every use.

To clean the canopy and walls use a mild detergent in warm water with a soft mop or cloth. It is important to note that no solvents or abrasive cleaners should be used on any part of the Pop Up Tent. We suggest that you do not extend the uprights so that the canopy is more easily accessible without ladders.

To avoid the growth of mildew on the canopy and walls, it is important that the Pop Up Gazebo is completely dry before packing down into the carry bag.

## Maintenance

Make sure that you check the Pop Up Tent before every use to ensure that:

- No part of the frame or trusses are broken or damaged
- All screws are intact and tight
- Upright posts are clean and free of any tape or other items

Any damage to the frame or trusses, or missing screws, will put extra stress on the Pop Up Tent and may cause structural damage or failure. The Pop Up Tent should not be used until these items have been repaired or replaced.

Damaged parts of the frame or trusses can be removed using a screwdriver

Please contact Big Banner Australia at [sales@bigbanner.com.au](mailto:sales@bigbanner.com.au) to advise which replacement parts are required.

## Transportation

The Pop Up Tent must be transported in an upright position when the canopy is attached.

If it must be transported horizontally, the canopy must be removed from the frame before load to the vehicle to avoid damaged.

