


HOW TO CORRECTLY INSTALL MESH BANNER

Our mesh banner is supplied with eyelets every 500mm. They are placed every 500mm because you need to use every eyelet to secure the mesh banner to your fence.

Attach the mesh banner to the fence with at least 4.5mm zip ties that are UV stable. Feed a zip tie through each eyelet on the wrap, and secure it well to the fence. You want to ensure that in winds, the load on the zip ties is evenly distributed (ie - equal pressure on all zip ties in winds).

NOTE: Non-UV stable zip ties will lose strength over time and become brittle.

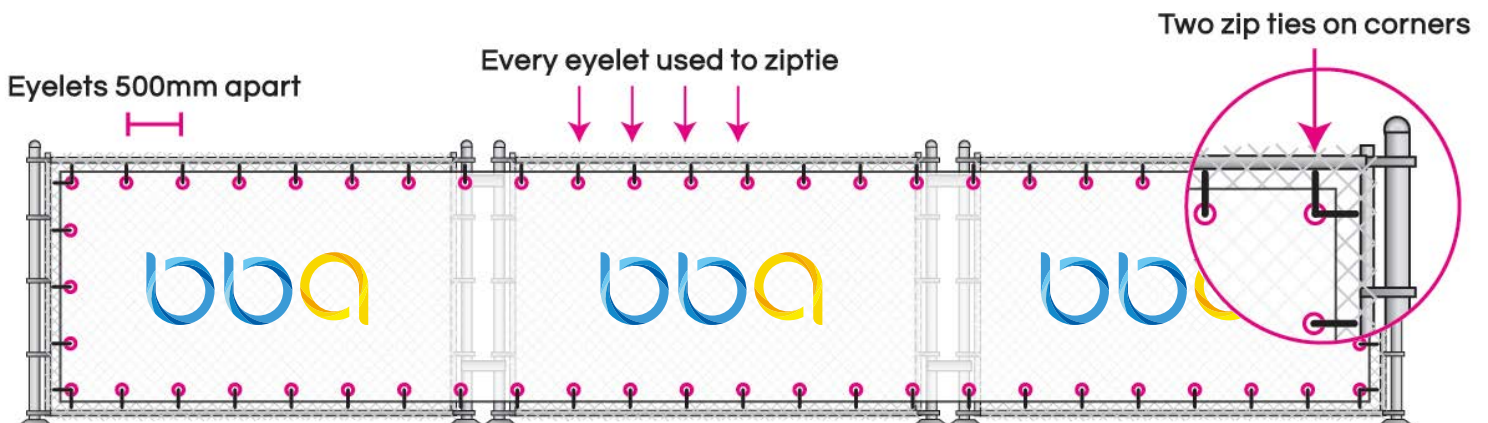

NOTE: In extreme weather conditions, the mesh banner should be removed from the fence

For eyelets in corners, you should be using two zip ties, one on the horizontal axis and one on the vertical axis, as per the above image highlight

If you have any questions, call our team on 1300 550 168 before installing the mesh banner.

IMPORTANT WARNING

Failure to follow these instructions will potentially result in your mesh banner becoming unsecured and flapping in the wind.

This will result in damage to both the mesh itself, and the print, as per this example photo.

This type of damage is not covered under warranty as it is caused as a direct result of not being secured properly.

This type of damage is not repairable, and the only solution would be to replace the damaged section with a new banner.

