

1700-T1

Single side Automatic Laminating Machine User Manual

Installation and operation


① Opening package



Packed by environmental wooden case
Size: 2140*710*785mm
Tools for unpacking: hammer.
Straight screwdriver, Cross screwdriver


② Installation of bracket

M8X100 inner hexagon screw
M6X20 inner hexagon screw

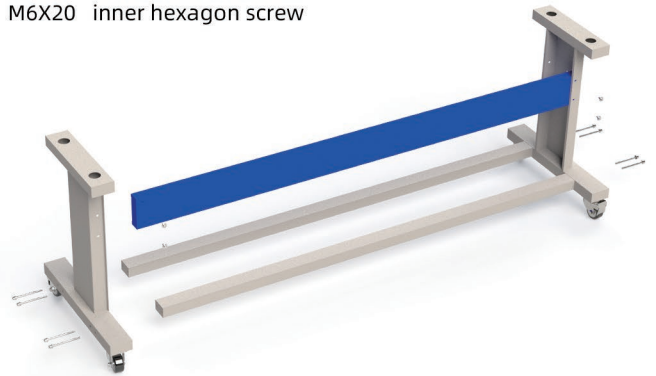


③ Removing the quartz tube

To prevent damage in transportation, we put 2 tubes. in fact only need 1. Cut the ligature with a razor blade. Please handle with care.

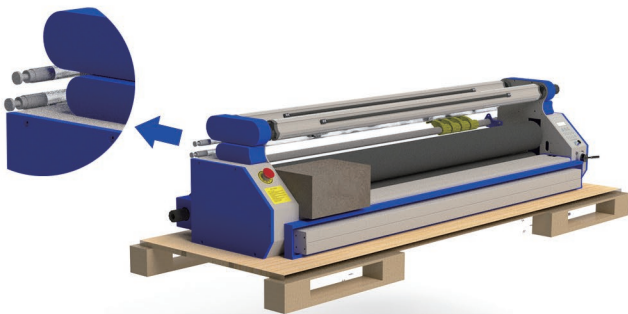


④ Lift the main part of the machine on the legs, pay attention to the alignment hole.

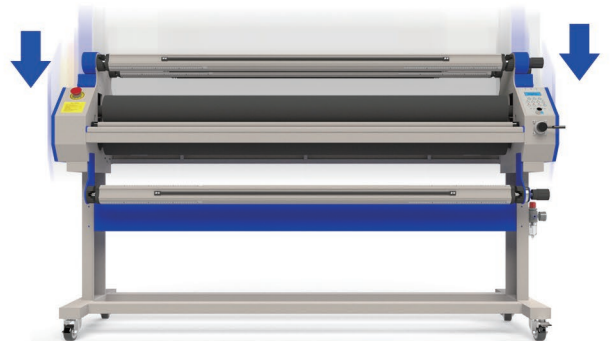


⑤ Installation of Quartz Tube


Connect the heating line on each side, then tighten the copper nut, cover the magnetic head.

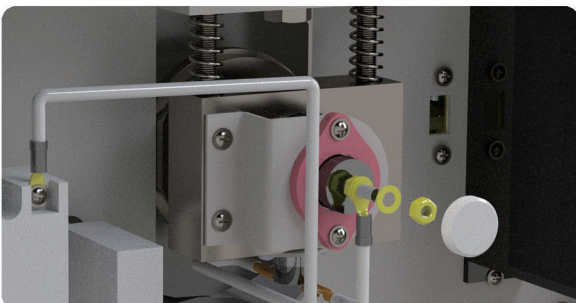

⑥ Installation of the oil-water separator


General gas successfully supplied as follows

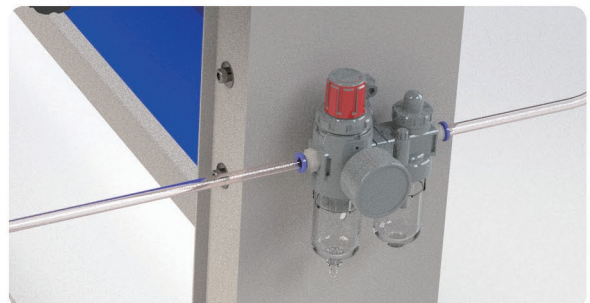


 Attention: Do not turn on the power when installing the tube.

⑦ Installation of the painting bracket

Removing the screws first, then lift the left and right brackets separately. Make sure to fit together perfectly. Keep at the same level with the roller.

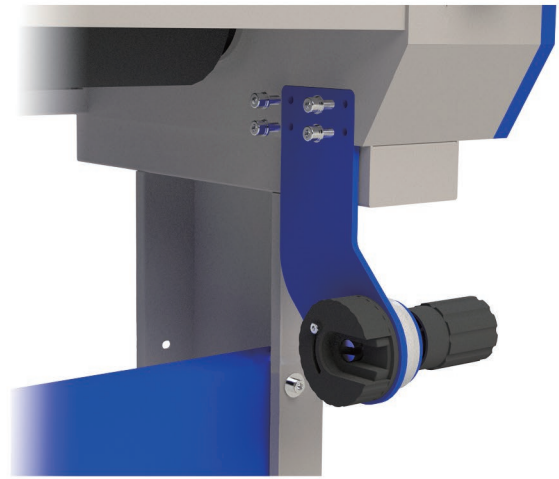


① Operation instructions

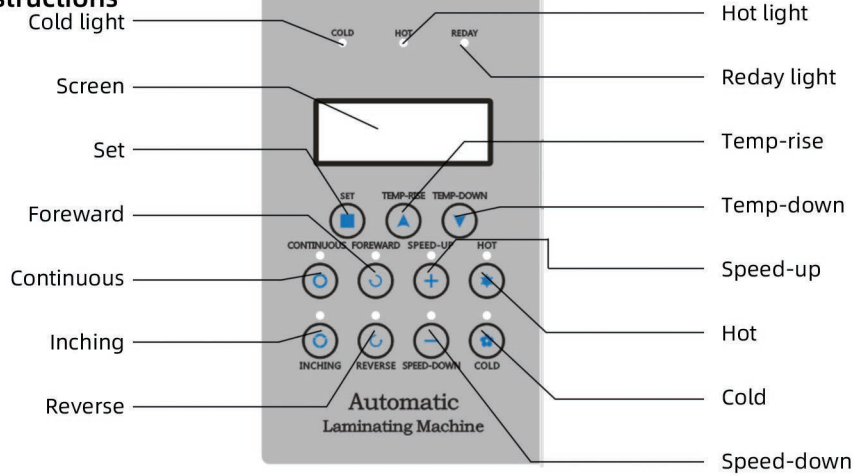

② Operation instructions

Working sketch map

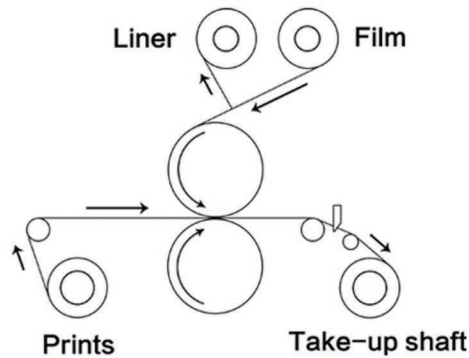

Maintenance

- Rollers can not be hurt by hard object such as blade.
- Rollers should be regularly maintained, wipe with a soft cloth dipped in medical alcohol or non-toxic alcohol.
- The friction plates need to be replaced regularly.